

Four Simple Steps




1. Etch and rinse.



2. Lightly air dry the tooth to remove standing/pooled/puddled water. Do not desiccate the tooth.



3. Place UltraSeal XT hydro.

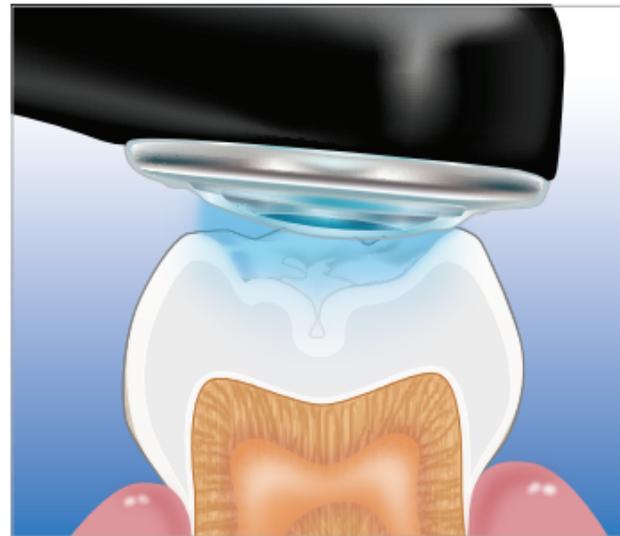

4. Cure for 3 seconds with VALO® on Xtra Power mode.